


## Fixing Instructions for the Twinfix 500/501 (P501) Rafter Gasket Glazing System

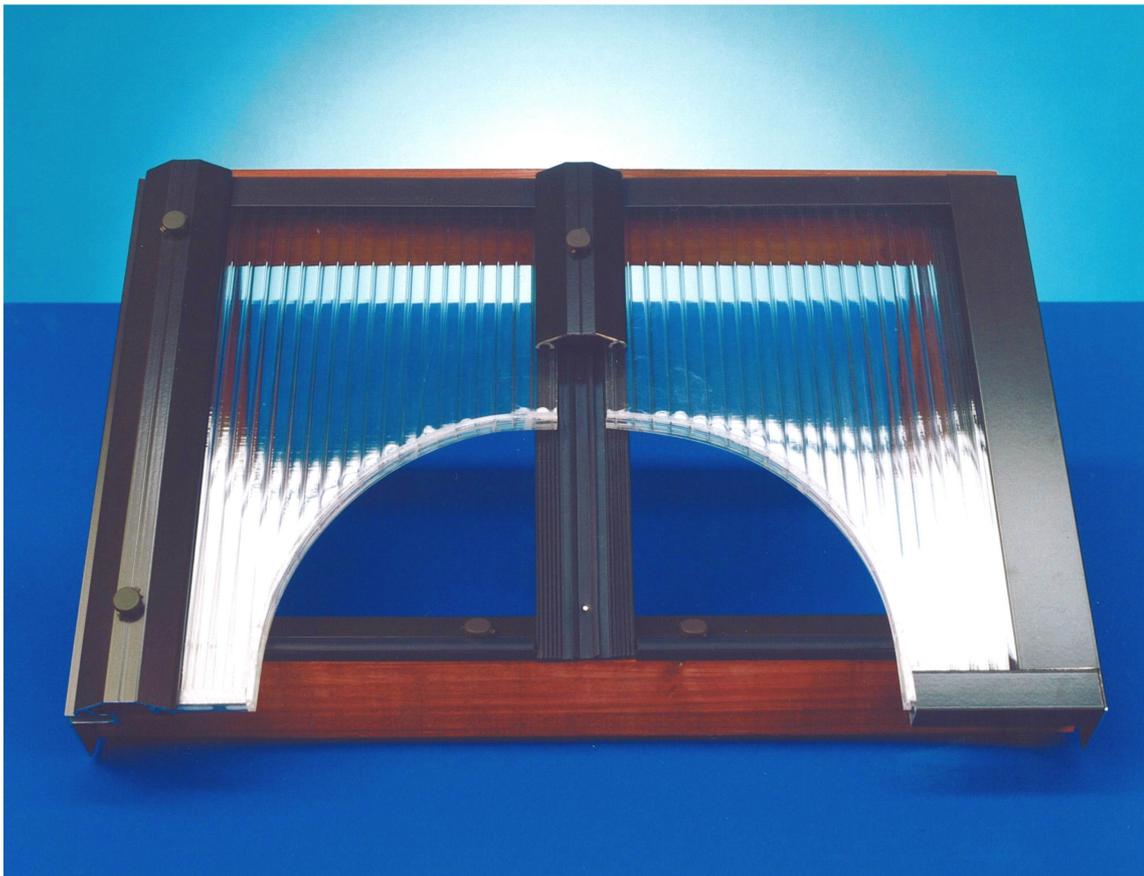

Tools you will need to construct  
your Twinfix roof:

Tape measure  
Screwdriver  
Spirit level  
Hacksaw  
Drill  
Hammer

201 Cavendish Place  
Birchwood Park  
Birchwood  
Warrington  
Cheshire  
WA3 6WU

Tel: 01925 811311  
Fax: 01925 852955  
Email: [enquiries@twinfix.co.uk](mailto:enquiries@twinfix.co.uk)  
Website: [www.twinfix.co.uk](http://www.twinfix.co.uk)

## System Description

The 500/501 system is designed for installing polycarbonate glazing onto 50mm wide rafters. It consists of a 50mm wide rafter gasket and a screw-down aluminium capping bar, which clamps the multiwall glazing firmly and securely in place. A wide range of other complimentary items, fixing accessories and matching profiles are available. The 500 system can be used with multiwall polycarbonate up to 25mm thick and solid polycarbonate. It can also be used with glass and glass units up to 24mm thick.

## Glazing with Glass

The 500/501 system can also be used when either glass or double glazed units are the preferred glazing material. However, the glazing centres do have to be narrowed. It is difficult to advise as to what the actual centres would be as this depends on the thickness and type of glass. **Mechanical end plates should be fitted when glazing with glass.**

## End Plates

When glazing with glass, a mechanically fixed end plate should be fitted at the eaves end of every rafter. These are usually powder coated aluminium and are screwed to the rafter itself with the rafter gasket laying over the end plate.

## Design Detail

Multiwall polycarbonate is normally used on a roof with a gentle slope, which will allow rainwater to drain into guttering. We recommend the minimum slope should be 5°.

Sheets of polycarbonate will expand and contract as temperatures change, always leave room to accommodate expansion when joining sheets on glazing bars (Fig.1). Sheet widths should be reduced by 10mm to allow for expansion. For example, if you are installing 10mm sheet and your glazing bars are 700mm apart (centre to centre), use a 690mm wide sheet.


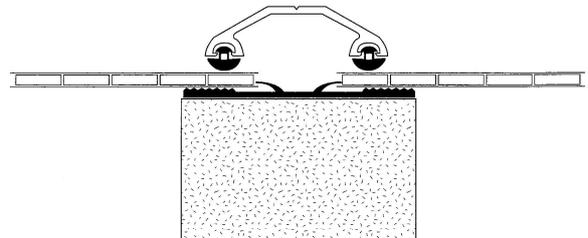


Fig.1

| <u>Sheet Thickness</u> | <u>Glazing Bar Centres</u> |
|------------------------|----------------------------|
| <u>10mm</u>            | <u>700mm</u>               |
| <u>16mm</u>            | <u>1000mm</u>              |
| <u>25mm</u>            | <u>1250mm</u>              |

When ordering or cutting polycarbonate to a required length, remember that your sheet should be 10mm shorter than your glazing bars to allow for the fitting of aluminium U profile end closures. We can supply you with sheet that has been cut to size, blown and sealed in our factory (in which case disregard Step 5).

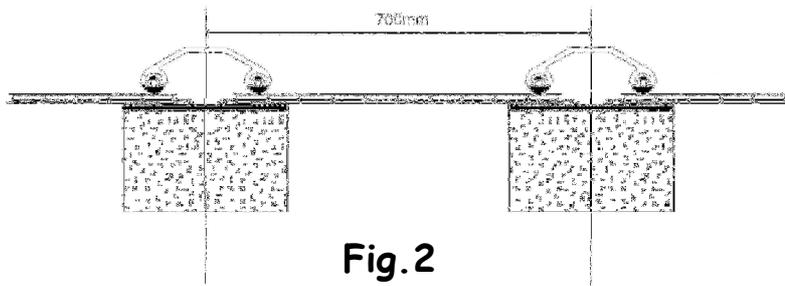


**Fig. 2**

**Step 1:** Measure and set out where the rafters and, if they are going to be used purlins, are going to lie. Rafters should be 50mm wide when installing the 500/501 system. 10mm sheet can be accommodated at centres no more than 700mm apart (Fig.2).

**Step 2:** Nail the rafter gasket (ref. 501) to the rafters through the central channel with galvanised nails spaced 300mm apart.


**Step 3:** Fix the eaves filler (ref. P226F) across the structure at the eaves end (Fig.3). This solves the problem of filling the gap between the underside of the sheet and the top of the support structure.

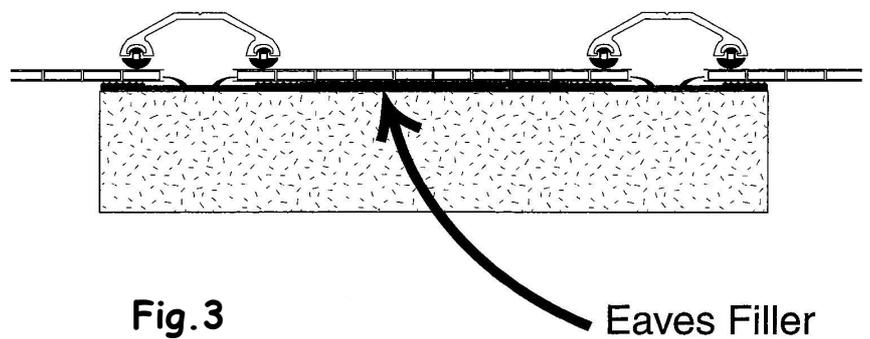

**Fig. 3**

**Step 4:** Cut the glazing bar cap (ref. 500) to the required length and drill the cap at regular intervals with holes no more than 300mm apart ensuring the holes will line up uniformly with the holes on each of the other bars once on the roof. The drill holes should be of a size to accommodate a 10swg screw. Slide the 226G gasket into each side of the glazing bar cap. If buying the bars in a pre-pack, the gasket is supplied already pressed into the bars.

**Step 5:** Cut to size sheet is supplied blown free of dust and taped, ready to fit. If cutting sheet on site, you must ensure the flutes of the polycarbonate are free of any dust or swarf. This is done by blowing air through the flutes and sealing the ridge end of the sheet with blanking tape (Ref. BT10/16/25). Seal the eaves (gutter) end of the sheet with anti-dust breather tape (Ref. ADT10/16/25). This process helps prevent dust entry whilst allowing condensation drainage (Fig.4).

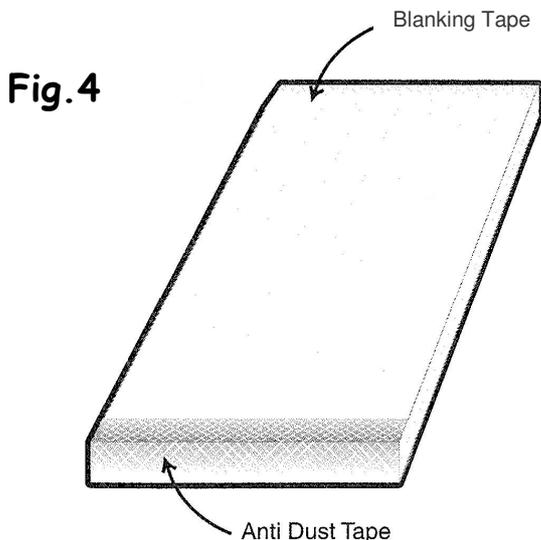

**Fig. 4**

You can now start to fix the roof sheets; starting at one side of the roof and working across, fixing and dressing down flashings as you go.

Please note, some polycarbonates are UV coated on one side only. The sheet should have a protective film on both sides but only one side is printed. This is the side that should face outwards towards the sun. Do not forget to remove the masking film on both sides of the sheet.

**Step 6:** Having already fitted a base bar to one end of the roof, fix a side trim (ref. 272/273/275) over the base bar to the side of the fascia or building (see Fig.5).

Fig.6


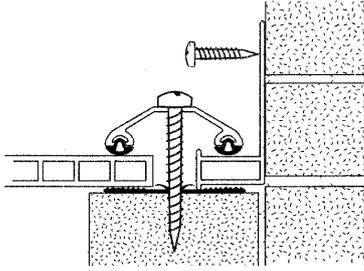


Fig.5

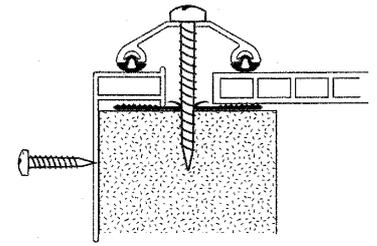

**Step 7:** If butting the glazing up to a wall face, simply upturn the side trim, fix to the wall and flash over (Fig.6).

**Step 8:** Place an adjoining sheet with 'U' profile already fitted at the ridge end into position on the rafter gasket remembering to leave 5mm at either side for expansion. Fix through the 500 cap and through the 501 rafter gasket by using 62mm x 10swg stainless steel wood screws (ref. 62/10/WS). Ensure that screws are not over-tightened as this will undulate the glazing bar cap, limit the expansion and compress the sheet (Fig.7). Finally, press down the screw cover caps.

**Step 9:** Repeat this procedure for the remaining panels and on the last panel, repeat Step 6 or 7 to finish off.

**Step 10:** Push fit the polycarbonate end plate (ref. 500EP) onto the end of the 500/501 system (Fig.8).

Fig.8


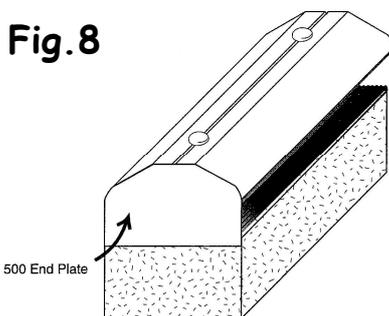


Fig.7

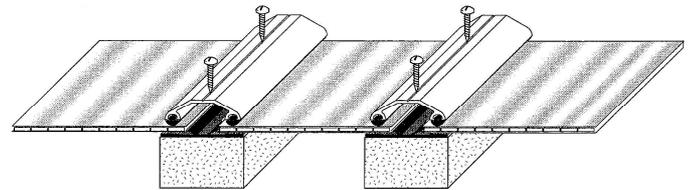

**Step 11:** Measure and accurately cut the aluminium U profile (ref. 252) to the exact length and fix over the anti-dust tape at the eaves end of the sheet between the end plates. A small bead of silicone sealant can be applied to the upper side of the sheet along the line where it meets the U profile and smooth to give a neat finish (Fig.9). Only use silicone sealant that is compatible with polycarbonate.

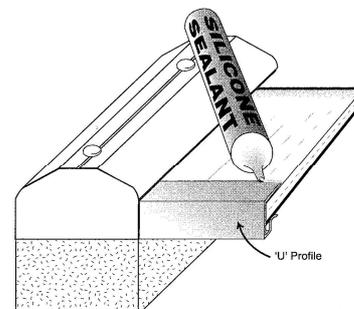


Fig.9

**Step 12:** Finally dress down the Butyl Flashing (ref. 200/20).

## Shaped Roofs

On a roof where a hipped bar is required, the 500 system can accommodate a slight angle. However, we would recommend installing a 60mm wide rafter at the hip and using the 321H/261 (P321H) hip rafter system. The P321 also gives a neat finish on those roofs where the vertical glazing bar is required to meet and merge into the hip rafter bar.